

## Model

HYMER  
Vehicle type  
Fiat camper vans



Pop-top roof heating system


## Assembly instructions

### Retrofitting the warm-air hose for the pop-top roof heating system

#### Service solution

Assembly of pop-top roof heating system according to the instructions.

## Sequence of operations:

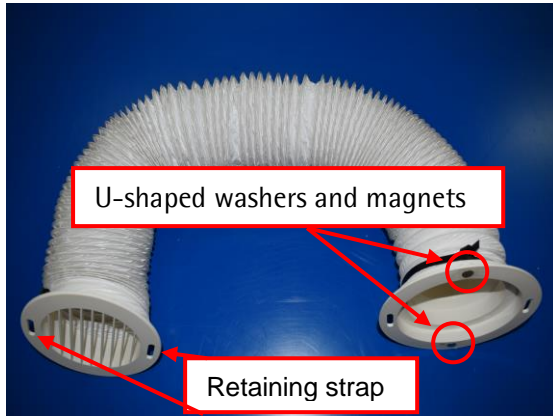


Prepare the ventilation hose.

Screw the two ventilation nozzles onto the ventilation hose and secure with cable ties.

Glue the U-shaped washers and magnets in place with Loctite 454, after cleaning them with Körasolv WL.  
**Observe the flash-off time!**

Attach the retaining straps.

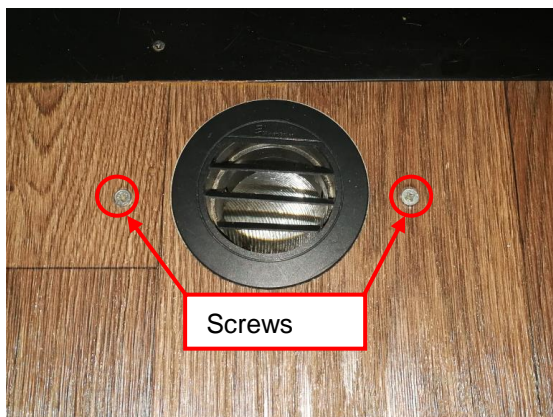

Screw the screws into the floor so they match up with the magnets fitted into the hose and are lined up with the centre of the hot-air nozzle installed in the floor.



Use the retaining straps to fix the hose in the area of the pop-top roof and position the bottom of the hose so the magnets are on the screws.

## Material required

	Article no.	Quantity
Ventilation nozzle	2484566	1 pc.
Ventilation nozzle	2484558	1 pc.
Magnetic lock	2365723	2 pcs.
Ventilation hose	2496265	1 pc.
Retaining strap	2510116	2 pcs.
Countersunk wooden screw 5.0 mm x 12.5 mm	1795466	Workshop supplies
Washer DIN 433 (ISO 7092) 5.0 mm	1751109	Workshop supplies
Körasolv WL	2037391	Workshop supplies
Cable tie		Workshop supplies
Loctite 454		Workshop supplies

## Working time:

**5 units**