

# HYMER Soundsystem powered by Jahnert



Mounting of woofer (in original woofer installation position)



Carefully lift and remove the cover of the woofer using a plastic wedge.



Unscrew and remove the screws for the woofer, and pull out the cable on the casing.



Remove the protective paper from the enclosed Alubutyl sheet, heat it using a hairdryer, and press the butyl side (adhesive) firmly onto the panel behind the woofer opening.

Attention:  
Wear gloves for protection against cutting and heat!



*Screw in the JEHNERT upgrade speaker and connect the original plug to the speaker.*



*Slide the foam sleeve over the connection and push it through the opening into the space under the cladding.*



*Then replace the plastic cover and clip it in.*



*Remove the 2 plastic screws and 3 metal screws at the top in the frame of the REMIS blind.*

*Remove and mount the driver and passenger side one after the other so that the blind is always attached on one side.*



*Remove the door seal rubber in the area of the A-pillar.*



*Carefully remove the A-pillar cladding, place it on the dashboard (protect the surface with adhesive tape), and unclip then unplug the existing original tweeter.*



*Connect the JEHNERT tweeter, clip it into the holder, and turn it until it locks into place.*



*Push the connection into the foam sleeve.*



Push the foam sleeve into the area between the dashboard and the A-pillar.

Reassemble the cladding parts and door seal in reverse order.

For the A-pillar cladding, ensure that the clips and cable are positioned correctly.

### Mounting the amplifier



Remove the storage compartment above the radio.

To do this, press in the outer surfaces at the top and bottom with your fingers and pull the compartment forwards.



Protect the working area around the radio from damage using suitable material (e.g. masking tape & bubble wrap).



Example features a Kenwood radio.

Remove the radio: depending on the type, unclip the cover, release the radio using a special tool (not supplied) and pull out forward.



Disconnect all connection cables on the radio and put it to one side.



Open the storage compartment, remove the 4 screws inside and put them to one side.



Remove the storage compartment and put it to one side.




Open the glove compartment and press the clips on the inside to release it so that it can be pulled out completely forwards.



Remove the screw on the inside left under the glove compartment flap, and the screws on the top in the glove compartment cladding.




Remove the glove compartment including the cladding part and put it to one side.

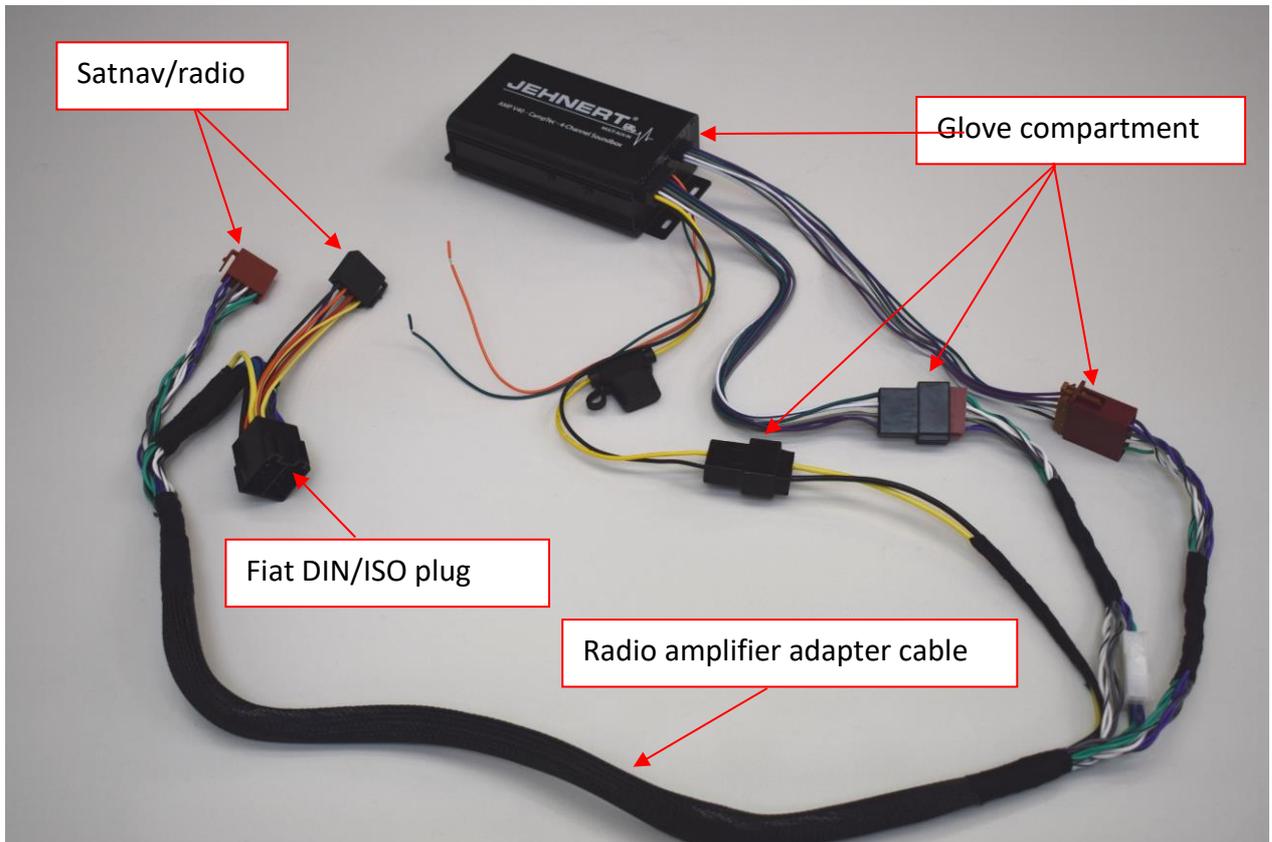



*Pull the supplied adapter cable from the radio slot to the storage compartment.*

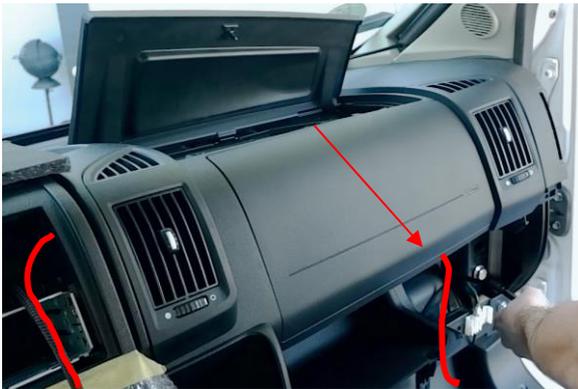


*Then run the adapter cable from the storage compartment back underneath into the free space behind the glove compartment.*



*Connect the adapter cable to the radio and Fiat DIN/ISO plug.*



*Reassemble the radio and storage compartment.*

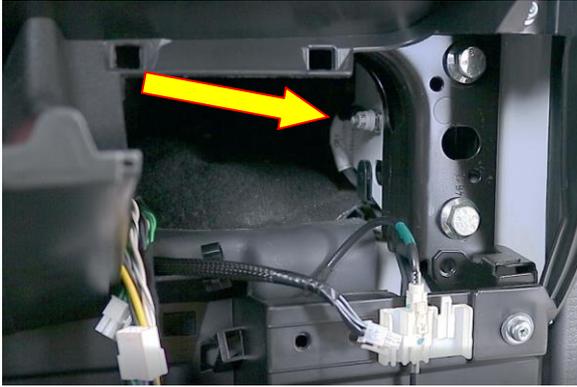

Unscrew the WAF 10mm.



Mount the amplifier on the mounting bracket (AMP V41 CampTec including connection cable) using the original nut with flange as shown and tighten the nut.



Lay all cables in the space behind the glove compartment.

Finally reassemble the glove compartment and storage compartment in reverse order.